 

 



Afmetingen / Dimensions / Abmessungen / Dimensions

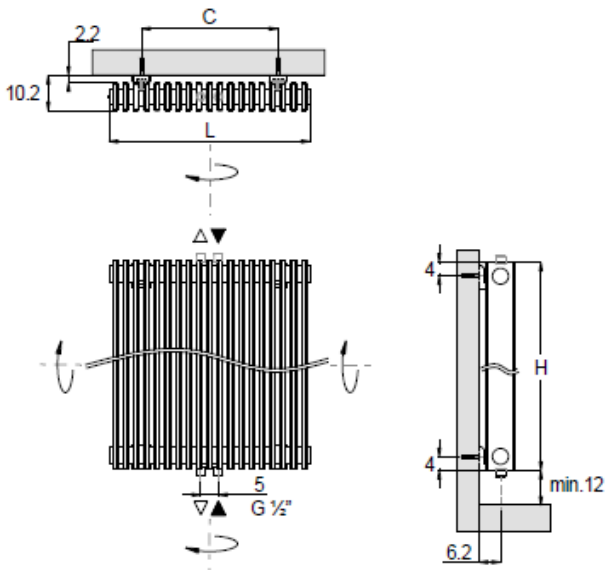

1





Gebbruik juiste schroeven in functie van wand.
Utiliser les vis correctes en fonction du mur.
Benutzen Sie korrekte Schrauben
In Abhängigkeit von der Wand.
Use correct screws in function of the wall.


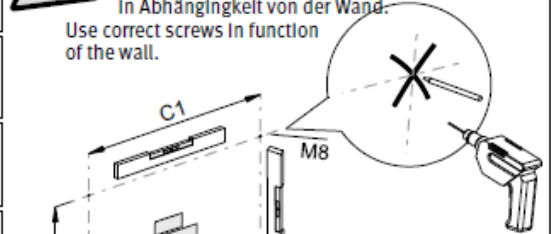


C1	
C2	

 
2

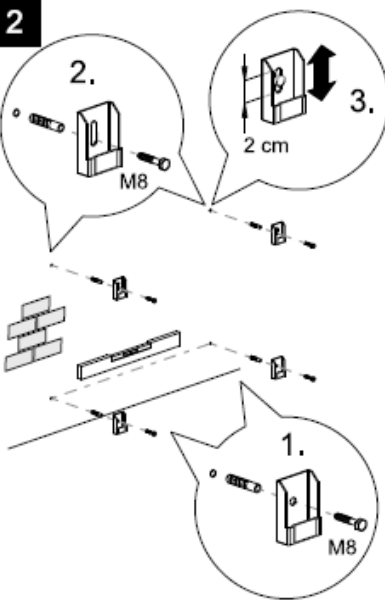

3

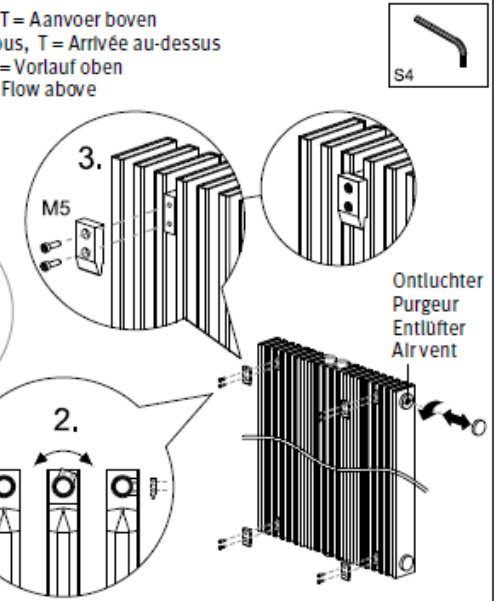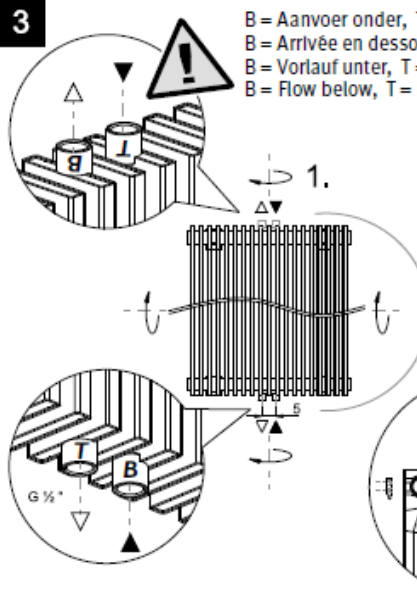

4

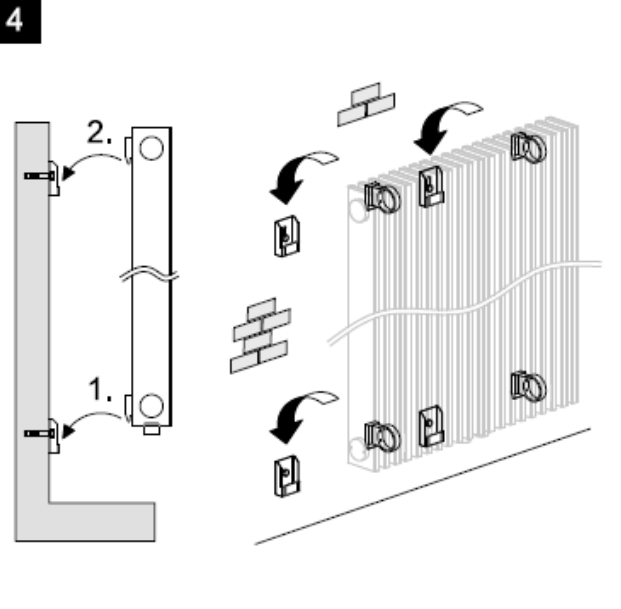








TWINE LRF / LRW

Montagehandleiding - Instructions de montage
Montagehinweis - Mounting instructions



Afmetingen / Dimensions / Abmessungen / Dimensions

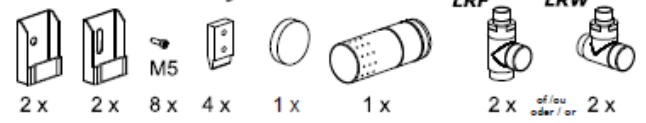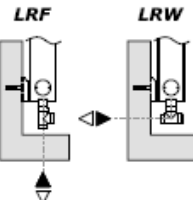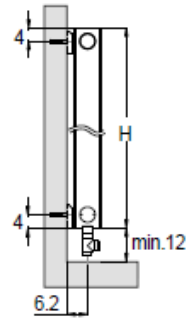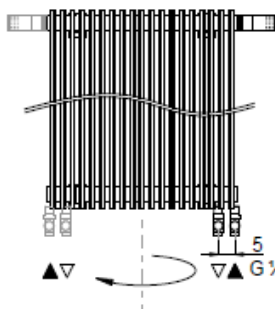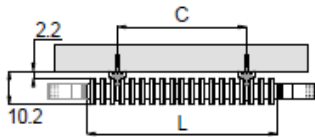

1

Gebruik juiste schroeven in functie van wand.
Utiliser les vis correctes en fonction du mur.
Benutzen Sie korrekte Schrauben
In Abhängigkeit von der Wand.
Use correct screws in function of the wall.

C1

C2

C1	
C2	

2

M8

2 cm

3

M8

3

1.

M5

5 G 1/2

!

3.

M5

5 G 1/2

!

S4

Ontluchter
Purgeur
Entlüfter
Air vent

4

2.

1.

LRF

5a

6.2 cm

5 cm

Aansluiting naar de vloer
Raccordement vers le sol
Anschluss zum Boden
Connection to the floor

LRW

5b

5.3 cm

5 cm

6.2 cm

Aansluiting naar de wand
Raccordement vers le mur
Anschluss zur Wand
Connection to the wall